


**Gas Range Free Standing
Stainless Steel & Black
Instruction Manual**

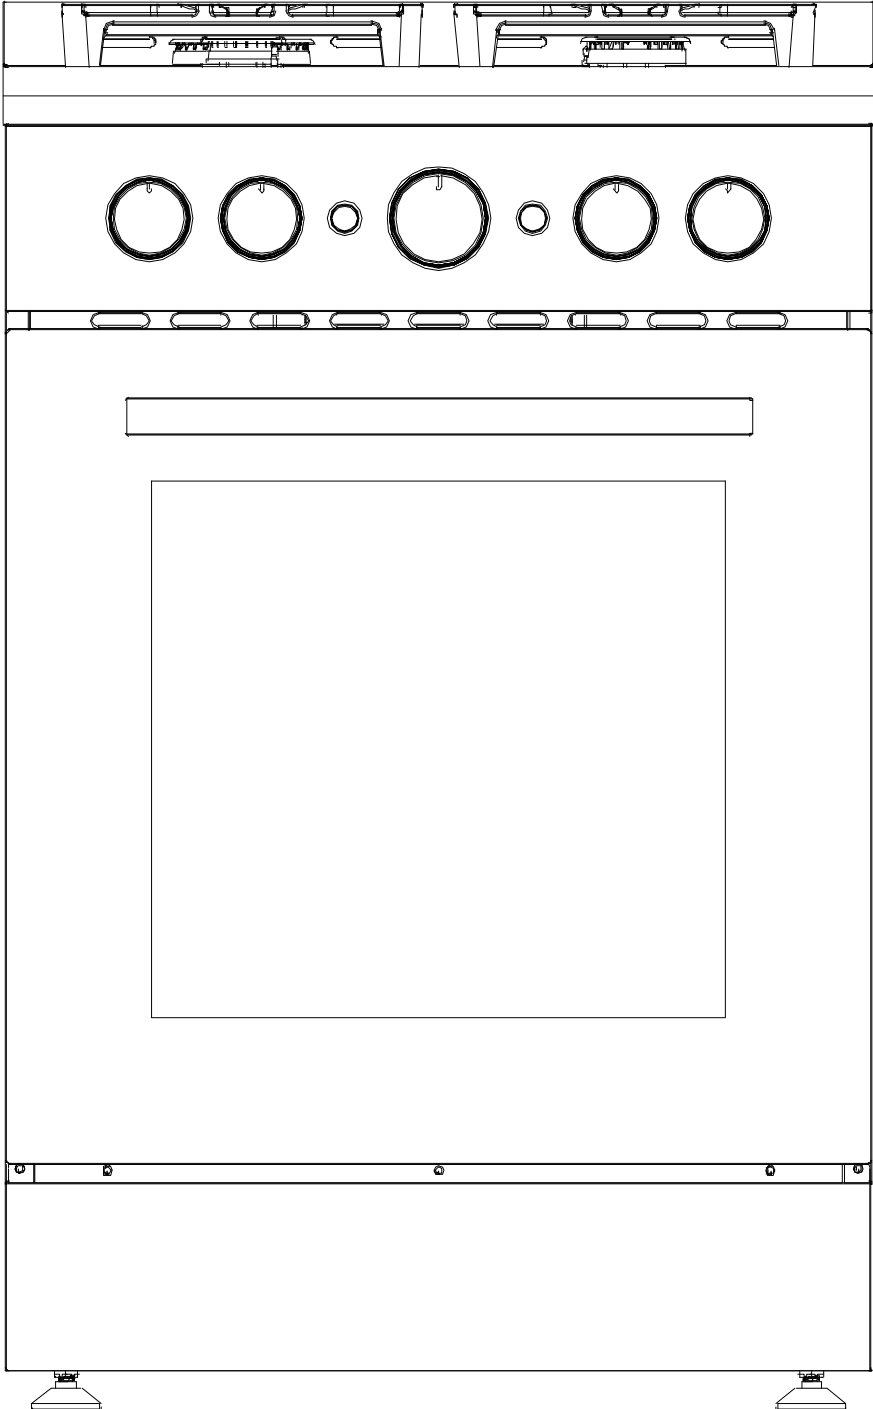

RP-RANGE-24BK-FS | RP-RANGE-24SS-FS

Safety	1
Installation	2
Parts & Features	3
Operation	4
Troubleshooting	6
Cleaning & Upkeep	6
Warranty	8

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLING AND/OR OPERATING THE APPLIANCE.

GETTING STARTED

We appreciate your purchase of the RecPro Gas Range for RVs. Prior to operating your new appliance, please read this manual carefully. This instruction manual contains information for safe use, installation, and maintenance of the appliance.

Keep this manual handy for future reference. Using the range by following the directions in this manual will help ensure safe use and reduce the risk of injury. Please pass on this manual to future owners of your range.

The manufacturer accepts no responsibility for any damage caused by not following these instructions.

SAFETY PRECAUTIONS

▲ WARNING

Never operate the top surface cooking section of this appliance unattended. Failure to follow this warning could result in fire, explosion, or burn hazard that could cause property damage, personal injury, or death. If a fire should occur, keep away from the appliance and immediately call your fire department. **DO NOT ATTEMPT TO EXTINGUISH AN OIL/GREASE FIRE WITH WATER.**

▲ WARNING

A child or adult can tip the range and be injured. Install the anti-tip device to the structure and the range. Verify the anti-tip device has been properly installed and engaged. Engage the range to the anti-tip device by wall and cabinet. Ensure the antitip device is re-engaged when the range is moved. Re-engage the anti-tip device if the range is moved. Do not operate the range without the anti-tip device in place and engaged. See installation instructions for details. Failure to do so can result in death or serious burns to children or adults.

Warning: If the instructions in this manual are not followed exactly, a fire or explosion may result causing property damage, personal injury, or death.

Do not store or use gasoline or other flammable vapors or liquids near this or any appliance.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliances.
- Do not touch any electrical switches.
- Do not use a phone in your recreational vehicle.
- Clear the recreational vehicle of all occupants.
- Turn off the gas supply tank valve(s) or main gas supply.
- From a location away from the gas smell, immediately call your gas supplier for instructions.
- If you cannot reach your gas supplier, call the fire department.
- Have the gas system checked and leakage source corrected by a qualified installer, service agency, manufacturer, or dealer of the gas supplier.

▲ The safety alert symbol alerts you to potential hazards that can result in property damage and/or serious bodily harm or death. All safety messages will follow the safety alert symbol and either the word **WARNING** or **CAUTION**. These words mean:

▲ WARNING:
Warning: Hazards or unsafe practices **COULD** result in severe personal injury or death.

▲ CAUTION:

Caution: Hazards or unsafe practices **COULD** result in minor personal injury.

Read and follow all instructions before using this appliance to prevent the potential risk of fire, electric shock, personal injury, or damage to the appliance as a result of improper usage of the appliance. Use appliance only for its intended purpose as described in this guide. Warnings and important safety instructions appearing in this guide are not meant to cover all possible conditions and situations that may occur. Common sense, caution, and care must be exercised when installing, maintaining, or operating the appliance. Contact the manufacturer about problems or conditions you do not understand.

IMPORTANT SAFETY INSTRUCTIONS

To reduce risk of tipping of the appliance from abnormal usage, the appliance must be secured by a properly installed anti-tip device.

1. Read all instructions before using the appliance.
2. Remove all tape and packaging before using the range. Destroy the carton and plastic bag after unpacking the range. Never allow children to play with packaging material.
3. Your appliance should be installed by a qualified technician in accordance with state and local laws.
4. Never modify or alter the construction of a gas range by removing leveling legs, panels, anti-tip brackets/screws, or any other part of product.
5. Do not use the oven or warmer drawer (if equipped) for storage.
6. Do not store items of interest to children in the cabinets above a range. Children climbing on the range to reach items could be seriously injured.

▲ WARNING

7. NEVER use this appliance as a space heater to heat or warm a room. Doing so may result in carbon monoxide poisoning and overheat the oven.
8. NEVER cover rear vent on counter top, internal cavity holes, or space at bottom of oven door.
9. NEVER cover an entire rack with materials such as aluminum foil or any other flammable items. Doing so blocks air flow through the oven and may cause carbon monoxide poisoning, explosion, or fire.
10. The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 PSI (3.5 kPa).
11. The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 PSI (3.5 kPa).
12. The maximum gas supply pressure: 1/2 PSI, the gas supply pressure for checking of the regulator setting: 10in. WC. The gas supply pressure for checking of the regulator setting shall be at least 11in. WC (2740Pa).
13. DO NOT TOUCH SURFACE BURNERS, AREAS NEAR THE BURNERS, OVEN BURNERS, OR INTERIOR SURFACES OF THE OVEN OR WARMER DRAWERS (if equipped).
14. During and after use, do not touch or let clothing or other flammable items touch these areas until they have sufficient time to cool down. Both surface burners may be hot even though flames are not visible and may be hot enough to cause burns.
 - a. Wear proper apparel: Loose fitting or hanging clothing should never be worn while using this appliance.
 - b. Watch closely when heating fat or grease. Fat and grease may catch fire if allowed to become too hot. If there is a grease fire, smother the fire with a pan lid, use baking soda, or a dry chemical or foam-type extinguisher. DO NOT USE WATER OR FLOUR.

▲ WARNING

Gas leaks may occur in your system and result in a dangerous situation. Gas leaks may not be detected by smell alone. Gas suppliers recommend you purchase and install a UL approved gas detector. Install and use in accordance with the manufacturer's instructions.

15. Use only dry pot holders. Do not let pot holders touch hot burners. Do not use a towel in place of pot holders.
16. Never heat unopened food containers as the buildup of heat and pressure may cause container to explode and result in injury.

INSTRUCTIONS FOR USING YOUR COOKTOP:

1. Using proper flame size: adjust flame so it does not extend beyond the edge of utensils. Undersized utensils will expose a portion of the burner flame to direct contact and may result in ignition of clothes. Proper utensil and flame size will improve efficiency. Burners are different sizes for different utensil sizes.
2. Using the stove top grill on a sealed gas burner will cause incomplete combustion and can result in carbon monoxide poisoning.
3. Know which knob controls each surface burner. Place a pan of food on the burner before turning it on, and turn the burner off before removing pan.
4. Always turn the knob to the full HI position when igniting top burners and visually check that burner is lit.
5. Adjust the flame so it does not extend beyond the edge of the utensil.
6. Utensil handles should be turned outward and not extend over adjacent surface burners. This will help reduce the risk of burns, ignition of flammable materials, and spillage due to unintentional contact with the utensil.
7. **Never leave surface burners unattended during use:** Boil overs cause smoking and greasy spill overs that may ignite.
8. **Protective liners:** Do not use aluminum foil to line surface burner pans or oven bottom, except as suggested in this manual. Improper installation of these liners may result in risk of electric shock or fire.

CLEANING INSTRUCTIONS

Clean your range regularly to keep all parts free of grease that could catch fire. Exhaust fan ventilation hoods and grease filters should be kept clean. Do not allow grease to accumulate on hood or filter as greasy deposits in the fan could ignite. When you are cooking food under the hood, turn the fan on.

INSTALLATION

The installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54 or, in Canada, the Natural Gas and Propane Installation Code, CSA B149.1. The appliance, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the National Electrical Code, NFPA 70 or the Canadian Electric Code, CSA C22.1-02.

▲ WARNING



Installation of this appliance must adhere to the written instructions in this manual. No agent, representative, or employee of the manufacturer of RecPro appliances or other persons has the authority to change, modify, or waive any provision of the Instructions of this manual.

CABINET CUTOUT INSTRUCTIONS


To ensure proper operation of your range, suitable cabinets must be used, and cabinets must be leveled, with the bottom of the range supported.

NOTE:

1. The minimum horizontal distance from the back of the appliance to any adjacent vertical combustible wall extending above the top panel is 8" (measuring from the rear burner center to the back wall).
2. Minimum horizontal clearance of 7.25", measured from center of the rear burner, between the appliance and any combustible construction extending from the cooking surface to 18" (457 mm) above the cooking surface.
3. The minimum horizontal distance between overhead cabinets must not be less than the width of the appliance.
4. The maximum depth of cabinets installed above top surface cooking sections is 13" (330 mm). Any opening in the wall behind the appliance and in the floor under the appliance shall be sealed. If the cabinet is deeper than 13" it must have non-combustible protection.

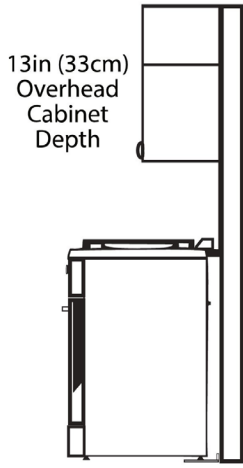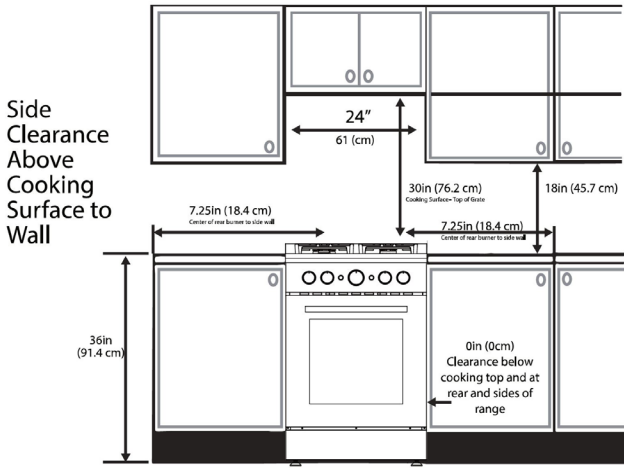


Product Dimensions:

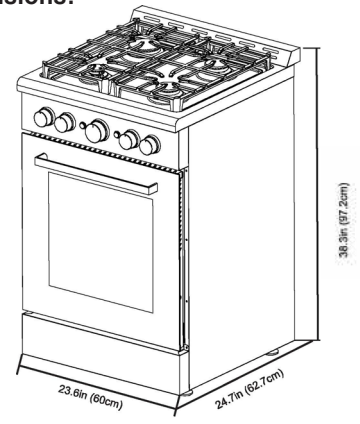


How to light each burner during a power failure

1. Light a match and place it next to the burner flame holes.

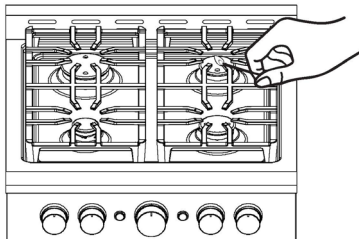


2. Press and turn the knob counter-clockwise to the HI position.

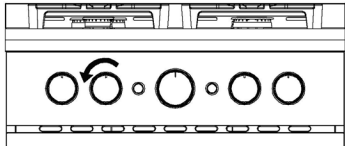


How to light the burner of the oven during a power failure


1. Open the oven door and take out the baking pan and drip pan.

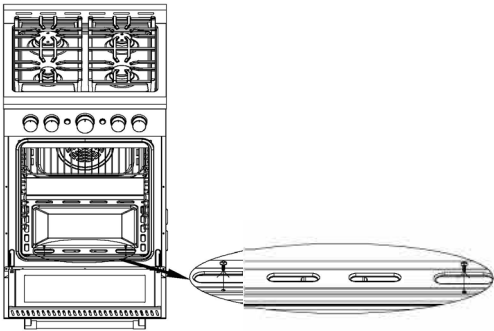

2. Press and rotate the knob to the left to the low fire position. While pressing the knob, light the pilot light with a match.

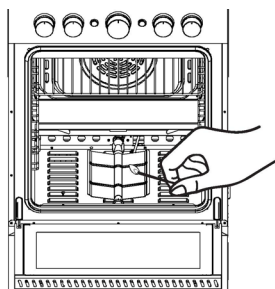

3. After the pilot light is lit, turn the knob to the HI position to light the oven burner.

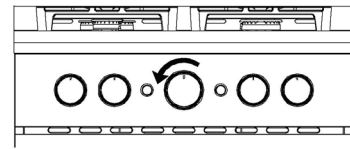


PARTS & FEATURES

COOKTOP

BTU/HR

		24"
1	FRONT RIGHT SEMI RAPID	6000
2	REAR RIGHT SEMI-RAPID	6000
3	RAPID	9100
4	AUXILIARY	3500

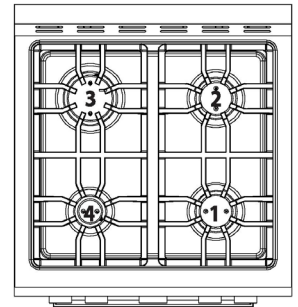

Caution: If the burner is accidentally extinguished, turn the gas off at the control knob and wait at least 1 minute before attempting to relight.

Caution: Gas appliances produce heat and humidity in the environment in which they are installed. Ensure that the cooking area is well ventilated following national/local codes.

PARTS & FEATURES

CONTROL PANEL

Oven Controls		Cooktop Controls	
5.	Oven light ON/OFF button	1.	Front left burner control knob
4.	Oven temp control knob	2.	Rear left burner control knob
3.	Convection ON/OFF button	7.	Front right burner control knob
		6.	Rear right burner control knob

This appliance conforms to the directive: ANSI 221. 57-2010 Recreational Vehicle Cooking Gas Appliances ANSI 221. 57a-2012 Addenda to Recreational Vehicle Cooking Gas Appliances CAN1-1.16-M79 (reaffirmed 2016) Propane Cooking Appliance For Recreational Vehicles

OPERATION

How to use the top burners:


Gas flow to the burners is adjusted by turning the knobs which control the valves. Turning the knob so that the Indicator line points to the symbols printed on the panel achieves the following functions:

When knob is rotated to the HI position it will permit the rapid boiling of liquids, whereas the LO position allows the warming of food or simmering of liquids.

To reduce the gas flow to minimum, rotate the knob counter-clockwise to the LO position.

Other intermediate operating adjustments can be achieved by positioning the indicator between the HI and LO positions, and never between the HI and OFF positions.

When the range is not being used, set the gas knobs to their OFF positions.

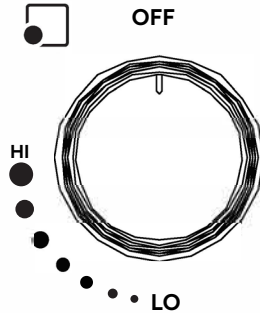


Lighting gas burners:

In order to light the burner, you must:

1. Push and turn the knob in a counter-clockwise direction to the HI position (maximum rate), then push in and hold the knob until the flame has been lit. The sparks produced by the internal igniter will light the designated burner. In the event that the local gas supply conditions make it difficult to light the burner in the HI position, try again with the knob in LO position.
2. Adjust the gas knob to the desired position. To re-light the burner, return the knob to the OFF position and repeat the operations for lighting.

Useful Information on proper flame for burner:

A good flame should be blue with a yellow tip. Some yellow tips on flames up to 1 inch in length are acceptable as long as no carbon or soot deposits appear. If flames are excessively yellow and irregular, the oil residue may not be completely burned off, or the Venturi tubes may be clogged or may not be properly positioned over the holes. Allow the appliance to cool before repositioning the Venturi tubes over the valve and holes.

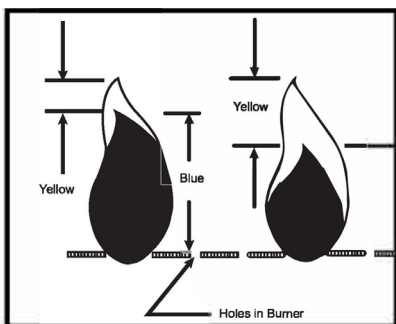


Checking the flame quality:

All flames need to be visually checked to determine their flame quality.

1. Soft blue flames: Normal for natural gas operation.
2. Yellow tips on outer cones: Normal for LP gas operation.
3. Yellow flames: Abnormal for any gas operation; call for service.

If burner flame looks like 3, the range should not be used until it is serviced. Call for service. Normal burner flames shall look like 1 or 2, depending on the gas type you use.

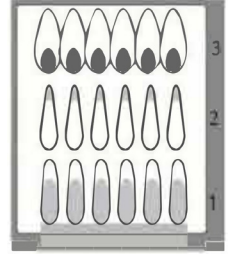

How to use the gas oven:

General features:

Oven burner, mounted on the lower part of the oven, 12000BTU/hr Ratings.

Using the oven for the first time:


It is advised to follow these instructions.

1. Insert shelves and tray
2. Turn the oven on to the maximum temperature position (500°F) to eliminate possible traces of grease from the oven burner.

OVEN BURNER

1. Carries out normal "oven cooking".
2. The gas flow to the burner is regulated by a thermostat which allows it to maintain the desired oven temperature.
3. Control of the temperature is assured by a thermostatic probe positioned inside the oven.
4. The probe must always be clean and kept in its housing. An incorrectly positioned or dirty probe may impede control of the temperature.

GAS OVEN SETTING	
Number printed on the knob Temperature in °F	Corresponding temperature in °C
300	149
350	177
400	204
450	232
500 (MAX)	260

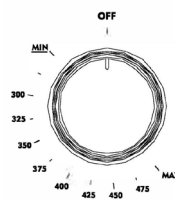

OVEN THERMOSTAT

The numbers printed on the control panel indicate the oven temperature value (°F). To regulate the temperature, set the chosen number on the control knob indicator.

NOTE:

When the range will not be used for long periods of time, set the gas knobs to their OFF positions and close the gas shut-off valve placed on the main gas supply line.

VERY IMPORTANT: The oven should only be used with the door closed.

IGNITION OF THE OVEN BURNER

The thermostat allows the automatic control of the temperature. To light the oven burner operate as follows:

1. Open the oven door to its full extent.
2. Lightly press the knob and turn the thermostat knob counter-clockwise to MIN position.
3. Press the knob inward and hold to activate the electronic ignition. Note that you will hear a “clicking” noise. Hold the knob pressed inward until the oven burner is lit. Once the oven burner is lit, release the knob.

In case of power outage, you can manually light the burner by pressing the knob inward and immediately approach a lighted match to the opening “A” (see the diagram above).

Never continue this operation for more than 15 seconds. If the burner has still not ignited, wait for about 1 minute prior to repeating the ignition.

4. When using the range for the first time or after long period of non-usage, keep pressing the knob inward for approximately 10-15 seconds after the burner has lit to ensure the gas valve has been accurately primed.
5. Close the oven door slowly and adjust the burner accordingly to the desired temperature. If the flame extinguishes for any reason, the safety valve will automatically shut off the gas supply to the burner.
6. To re-light the burner, first turn the oven control knob to the OFF position, wait for at least 1 minute and then repeat the lighting procedure. Attention: The oven door becomes very hot during operation. Keep children away.


OVEN COOKING

Before introducing the food, preheat the oven to the desired temperature. For a correct preheating operation, it is advisable to remove the tray from the oven and introduce it together with the food, when the oven has reached the desired temperature. Check the cooking time and turn off the oven 5 minutes before the theoretical time to recuperate the stored heat.

OVEN LIGHT

The range is equipped with a light that illuminates the oven to enable visibility of the food that is cooking. This light is controlled by a knob on the control panel.

ALWAYS PERFORM A GAS LEAK CHECK BEFORE USING GAS RANGE!

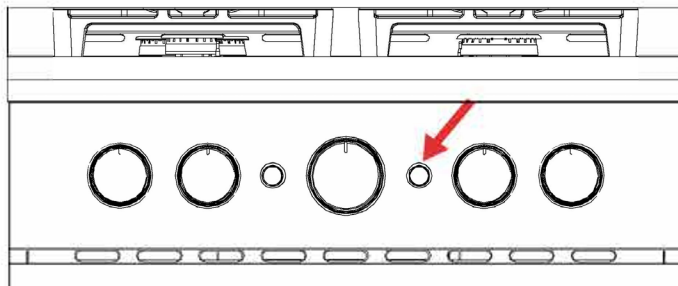

Before operating the gas range, always preform a check for a gas leak. **DO NOT** use gas range until the leak test is preformed and confirmed there are no gas leak indications. Test for leaks by using between 11-13.8 WC pressure.

1. If there is a gas leak detected, replace the defective part recommended by the manufacturer or tighten the loose joint properly.
2. Leak testing of the appliance shall be conducted according to the manufacturer's instructions. Do not use a flame to check for gas leaks. Use a brush to spread a soapy water mixture around the area you are checking. If there is a gas leak, you will see small bubbles in the soapy water mixture at the leak point.

▲ WARNING:

NEVER cover any slots, holes, or passages in the oven bottom or cover an entire rack with materials such as aluminum foil. Doing so blocks airflow through the oven and may cause carbon monoxide poisoning. Aluminum foil linings may also trap heat, causing a fire hazard.

Top burner flame size should be adjusted so it does not extend beyond the edge of the cooking utensil. This instruction is based on safety considerations. Possible hazards or injuries may result from the misuse of appliance doors or drawers, such as stepping, leaning, or sitting on the doors or drawers.

▲ WARNING:

BEFORE TESTING FOR GAS LEAK

1. Ensure gas range controls are in their OFF positions.
2. Never test for leaks with open flames present.
3. Do not smoke when testing for gas leaks.
4. Use a soapy solution to detect gas leaks. If there are bubbles present, there is a gas leak.

⚠ WARNING:


- **MERCHANDISE HARM RISK!** If the control knob is set to the LIGHT position, **DO NOT COOK** as damage may occur to the ignition module and the burner electrodes.
- **DO NOT LET** children or pets play near, at, or around gas range. Be cautious as range can tip/fall if pulled. **ALWAYS** check oven before setting oven temperature.
- **DO NOT USE** cookware that exceeds 1 inch larger than the burner grate. If oversized cookware is used, this may cause extreme heat build-up and may result in destruction to the burner grate, burner, and/or cooktop (maximum pan size= 10 inches).
- **DO NOT USE** any cooking pan, griddle, or any cooking instrument that covers more than one burner at any time. Maximum pan size is a 10 inch skillet. Any cooking instrument larger than 10 inches is strictly prohibited. If this instruction is not followed, results may cause large amounts of heat that could result in damage to the item, the burner grates, or the range top.
- Leaving an empty or boiled dry cooking utensil on a hot burner could result in damage to the cooking utensil or could result in serious damage and/or fire. Remove all pans/cooking utensils when not in use.

COOKING TIP:

Preheat the oven 15 minutes before placing food.

PRODUCT TROUBLESHOOTING	
PROBLEM/SYMPOM	POSSIBLE CAUSE/SOLUTION
Surface burners will not ignite or surface burners do not ignite uniformly	Burner control knob has not been fully rotated to the HI position.
	Check to see if gas valve is open. If not, open it.
	Burners are clogged. Make sure burner is off. Use a small wire, toothbrush, or needle to clean burner ports and slots.
	Low gas level in tank. Refill or replace gas tank.
Surface burner flame is yellow or orange instead of blue.	There is moisture on the burner. With burner off, dry burner thoroughly.
	Debris may be present in gas line. Let burner run for a few minutes to see if flame changes to blue. Humid air in the home, sometimes caused by running a humidifier, may cause flames to be burn yellow.

WIRE DIAGRAM

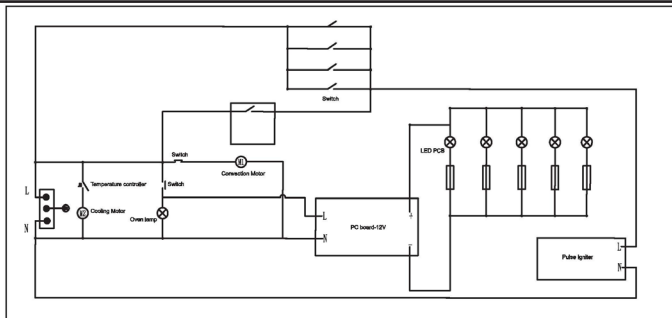

SANITATION AND UPKEEP


- Ensure all control knobs are in OFF position before cleaning.
- Ensure the cooktop and all components relating to the gas range are cooled off before touching or cleaning.
- When cleaning the oven, only use an oven cleaner specifically designed for ovens. Ensure proper usage of the oven cleaner by following the oven cleaners instructions thoroughly.
- If there is a spill on the gas range, cooktop, grates, burner caps. or any other component of the gas range, clean the spill right away (make sure the range is cooled off) as leaving any spill can result in the discoloration or staining of your range or stainless steel.
- Always use caution when cleaning, especially around the burners. If caution is not used. you may catch the metal igniter electrode on your cleaning item (such as your sponge, washcloth, etc.) which can damage or break the metal igniter electrode. If the metal igniter electrode is damaged, the igniter may not ignite.
- If you wish to clean or wash porcelain surfaces. you must allow the areas to cool beforehand. Hot porcelain can crack and cause burns.
- The best way to clean the cooktop porcelain, stainless steel, painted surfaces. burner grates. plastic items. or any other items relating to the gas range is to use mild soapy water solution.

THE DO NOT'S OF SANITATION AND UPKEEP:

- **DO NOT USE** oven cleaners on any surface other than the oven .
- **DO NOT USE** bleach .
- **DO NOT USE** rust removers .
- **DO NOT USE** steel wool, only use non abrasive pads such as the soft side of a sponge or a soft washcloth.
- **DO NOT USE** any abrasive, gritty, or acid-type like cleaners.
- **DO NOT BLOCK** movement of combustion a.k.a air ventilation .
- **DO NOT STORE** flammable liquids or vapors (such as gasoline) or any other combustible equipment or materials near, at. or around the gas range.
- **DO NOT USE** any metallic or wire brush to clean any components relating to the range oven. Some wire or metallic brushes lose their bristles and these bristles could get stuck in the burner ports or other small crevices and could result in an explosion or fire.
- **DO NOT ALLOW** food that contains acids such as: vinegar, citrus juices (lemon, lime, grapefruit, etc), tomatoes, etc to remain on any painted, porcelain, cooktop, grates, or any other surface relating to the gas range. Some acids react to the paint and gloss that is used. If an egg spill should occur, clean the egg spill when cooktop has cooled down, do not allow the egg spill to remain on surface.

GENERAL RECOMMENDATION

1. Plug in the power cord. Make sure the outlet meets local or national electrical codes.
2. Slide the range into place.
3. Check the gas supply line to make sure it did not get damaged and it stayed connected during positioning.
4. Check to make sure the back leg of the range has slid into the anti-tip bracket. Carefully tip the range forward to ensure that the anti-tip bracket engages the back brace and prevents tip-over.

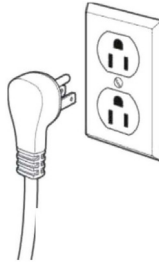

WARNING: Electrical Grounding Instructions This appliance is equipped with a three-prong grounding plug for your protection against shock hazard and should be plugged directly into a properly grounded receptacle. Do not cut or remove the grounding prong from this plug. Warning: Disconnect the electrical supply before servicing the appliance.

LEVELING THE RANGE



The range must be level for proper operation. The four leveling legs located on the corners at the bottom of range should be adjusted by turning them clockwise to make the range higher or counter-clockwise to lower the range until the range is level. Use a level on surface units to check the leveling of the range.

ANTI-TIP/ FRONT FOOT BRACKET INSTALLATION

To reduce the risk of tipping the range by abnormal usage or improper door loading, the range shall be secured by properly installing the anti-tip device packed with the appliance.


- Place the anti-tip bracket on the floor as shown in the figure below. The anti-tip bracket can be installed on either the right or left side .
- Mark the locations of the 2 holes of the ant-tip bracket on the floor.
- Secure the bracket to the floor using screws.
- Slide the appliance into position.
- Slide the front foot bracket under the front of the range and push until the bracket is up against the front foot.
- Secure the bracket to the floor (Recommend #8-15 x 1" wood screw, not provided).

NOTE: If the range is relocated, the bracket must be removed and installed in the new location.

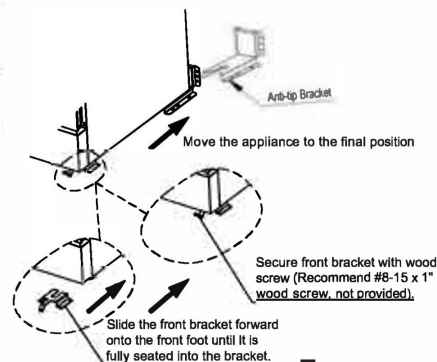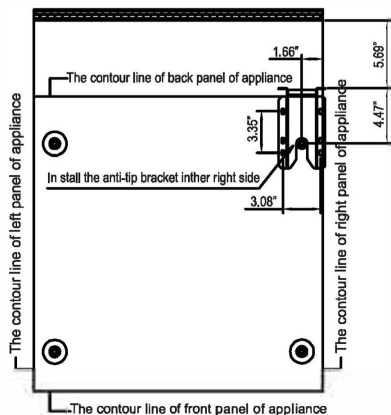


CHIMNEY DECORATION PANEL INSTALLATION


1. Remove the Chimney Decoration Panel from the package.

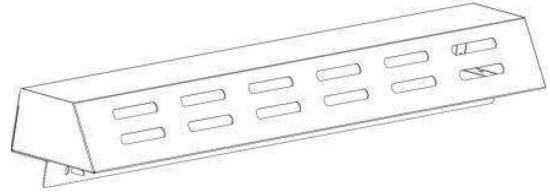

2. Align the hooks of the Chimney Decoration Panel with the groove of the cooktop and insert.

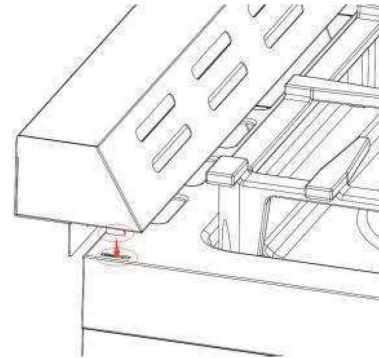

3. Take out the screws from the fittings and fasten the Chimney Decoration Panel with the screws to the back of the freestanding oven range.

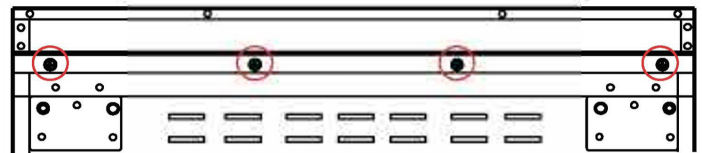

ONE YEAR LIMITED WARRANTY

Please read and retain this warranty. RecPro does not require Warranty Registration for this appliance.

Your RecPro appliance is covered by a one-year limited warranty. For one year from your original date of purchase of the original purchaser, RecPro will pay costs for repairing or replacing any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used, and maintained in accordance with the provided instructions.

EXCLUSIONS

This Warranty Does Not Cover the Following:

1. Products on which original serial numbers have been removed, altered, or cannot be readily determined.
2. Product that has been transferred from its original owner to another party or removed outside that USA or Canada.
3. Rust on the interior or exterior of the unit.
4. Products purchased secondhand.
5. Products used commercially.
6. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions.
7. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.
8. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory.
9. Service calls to repair knobs, buttons, handles, or other cosmetic parts.
10. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.
11. Damage to the finish of the appliance, RV, or home incurred during installation, including but not limited to floors, cabinets, walls, etc.
12. Damage caused by services performed by unauthorized service companies, use of parts other than genuine RecPro parts, or parts obtained from persons other than authorized service companies, or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God.

The customer's sole or exclusive remedy under this limited warranty shall be product or repair or replacement as provided herein. Claims based on implied warranties, including warranties of merchantability or fitness for particular purpose, are limited to one year or the shortest period allowed by law, but not less than one year. RecPro shall not be liable for consequential or incidental damages such as property damage and incidental expenses resulting from any breach of this written limited warranty or any implied warranties, so these limitations or exclusions may not apply to you. This written warranty gives you specific legal rights. You may also have other rights that vary from state to state.

Keep your receipt to establish the warranty period should service be required. If service is performed, please obtain and keep all receipts. Product features or specifications as described or illustrated are subject to change without notice.

IF YOU HAVE A PRODUCT PROBLEM:

1. If warranty service is required, return product to your dealer and/or retailer for refund or replacement; or
2. Contact RecPro Customer Service Department at 574-848-0405 or info@recpro.com.

Be sure to have the model and serial number (located on the appliance rating plate), proof of purchase, and the nature of the problem readily available.

FOR FUTURE REFERENCE, YOU SHOULD RECORD THE FOLLOWING INFORMATION:	
MODEL NUMBER:	
SERIAL NUMBER:	
STOCK NUMBER:	
DATE OF PURCHASE:	

REC PRO®

806 S. Division St.
Bristol, IN 46507
(574) 848-0405 | info@recpro.com