
AIRXCEL

Suburban

AIRXCEL, INC. - SUBURBAN DIVISION
676 Broadway Street
Dayton, TN 37321 | USA
423-775-2131 | Fax: 423-775-7015
www.Airxcel.com

RECREATIONAL VEHICLE DROP-IN COOKING HOB
INSTALLATION *and* OPERATION MANUAL
for MODELS: SDS2CE & SDS3CE
FOR USE WITH LIQUEFIED PETROLEUM GAS

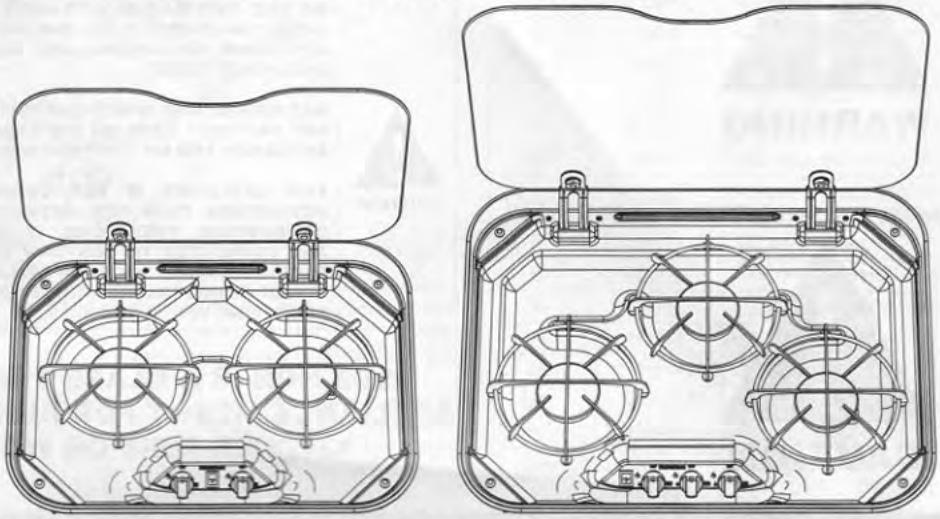

READ AND RETAIN FOR FUTURE REFERENCE

FOR USE IN: AT, GB, IE, CH, FR, NL, BE, FI, LU, ES, IT, NO, PT, DK, SE, SI, DE

⚠ WARNING

- **READ INSTRUCTIONS BEFORE USE**
- **ONLY USE THIS APPLIANCE IN A WELL VENTILATED AREA**
- **THIS APPLIANCE MUST BE INSTALLED IN ACCORDANCE WITH THE REGULATIONS IN FORCE.**

TABLE OF CONTENTS

WARNINGS AND SAFETY SYMBOL GLOSSARY	2
INSTALLATION	
INSTALLATION SAFETY WARNINGS	2
EXPLODED VIEWS / PARTS LISTS	2
WORKTOP CUTOUTS	3
FLUSH MOUNT FIXING & CABINET APERTURE	4
CONNECTING TO GAS SUPPLY	4
OPERATION	5
OPERATION SAFETY WARNINGS	
HOB OPERATION	
MAINTENANCE	6
WARNINGS / RECOMMENDATIONS	
WARRANTY	7

CE

Part Number 205378
12-08-2017

HOB INSTALLATION - SAFETY WARNINGS

WARNINGS AND SAFETY SYMBOLS

The safety symbols utilized identify possible hazards to users. Always respect all safety warnings identified with these symbols:

WARNING: Hazard of injury or death.

WARNING


CAUTION: To prevent possible injury and/or death

CAUTION

WARNING	THIS APPLIANCE MUST BE INSTALLED IN ACCORDANCE WITH REGULATIONS IN FORCE AND ONLY USED IN A SUFFICIENTLY VENTILATED AREA. ALWAYS READ, IN FULL, THE INSTRUCTIONS PROVIDED BEFORE INSTALLING AND USING THIS APPLIANCE. THIS APPLIANCE MUST BE INSTALLED BY SPECIALIST GAS SERVICE ENGINEERS.
WARNING	THIS APPLIANCE IS DESIGNED AND MANUFACTURED FOR COOKING FOOD ONLY. ANY OTHER USE IS CONSIDERED IMPROPER AND INCORRECT—CREATING POTENTIALLY HAZARDOUS CONDITIONS. THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR DAMAGES TO ENTITIES OR INJURIES TO PERSONS CAUSED BY IMPROPER INSTALLATION AND/OR INCORRECT USE.
CAUTION	BEFORE INSTALLING APPLIANCE, CHECK THAT THE LOCAL GAS SUPPLY (TYPE GAS AND PRESSURE) AND THE APPLIANCE REGULATORS ARE COMPATIBLE WITH THE APPLIANCE ITSELF. GAS REGULATING SPECIFICATIONS FOR THIS APPLIANCE ARE PROVIDED BOTH ON THE LABEL ATTACHED TO THE APPLIANCE AND ON THE PACKAGING. THIS APPLIANCE IS NOT CONNECTED TO A FUME EXTRACTION FLUE FOR EXTRACTING PRODUCTS OF COMBUSTION, THEREFORE, IT MUST BE INSTALLED AND CONNECTED TO CONFORM TO THE INSTALLATION REGULATIONS IN FORCE FOR APPLIANCES OF THIS TYPE. IT IS OF UTMOST IMPORTANCE TO RESPECT LEGISLATION REGARDING VENTILATION.

THIS HOB IS A CLASS 3 APPLIANCE: APPLIANCE MEANT FOR BUILDING INTO A KITCHEN UNIT OR WORKTOP.

EXPLODED VIEW *and* PARTS LIST *for* MODEL SDS2CE

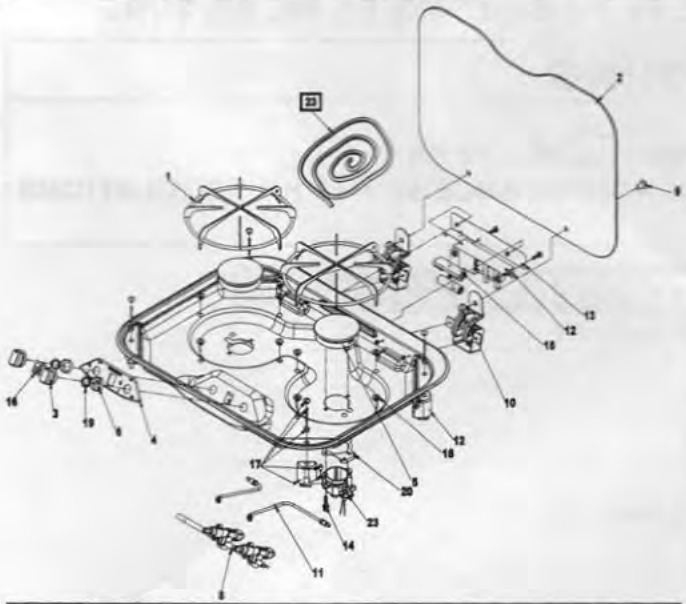

INSTRUCITONS *for* **INSTALLING EDGE SEAL**



STEP 1: Remove the paper covering from the adhesive strip on the seal. Do not remove adhesive covering from the entire strip.


STEP 2: Apply the adhesive side of the seal to the bottom of the cooking appliance in 2-3 inch increments. Cover entire perimeter of the cooking appliance.

STEP 3: Once seal has been applied, trim off any excess and discard.

ITEM NO.	PART NO.	DESCRIPTION
1	031394	GRATE, BURNER
2	310103	GLASS COVER
3	140262	KNOB, TOP BURNER
4	193455	STICKER CONTROLS
5	011020	BURNER ASSY.
6	071975	CUP, VALVE MTG.
7	171961	ORIFICE HOLDER ASSY.
8	172080	MANIFOLD/VALVE ASSY 2 BRNR
9	122022	BOLT, PLASTIC 5/16"-18
10	122023	NUT, PLASTIC 5/16"-18
11	171996	TUBE, ORIFICE HOLDER
12	233236	SPARK IGNITER
13	063771	BRACKET, IGNITER MTG.
14	122122	SCREW, #10-32 X .750 P.H. SERRATED HEAD MACHINE | (EXT. LOCK WASHER)
15	063772	BATTERY HOLDER
16	233238	SWITCH, SPARK IGNITER
17	521151	KIT, CORNER MOUNTING CLAMP
18	072042	GROMMET, TOP GRATE
19	122094	NUT, VALVE MTG.
20	072013	GASKET, ORIFICE HOLDER
21*	233260	WIRE ASSY (IGNITION MODULE TO GROUND)
22*	233262	WIRE ASSY (IGNITION SW. TO MODULE)
23	521167	KIT, EDGE SEAL

**ITEM NOT SHOWN*

EXPLODED VIEW *and* PARTS LIST *for* MODEL SDS3CE

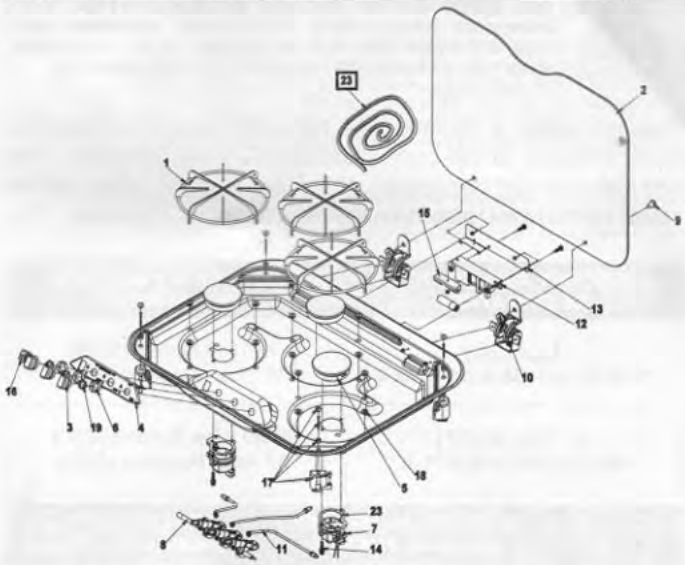

ITEM NO.	PART NO.	DESCRIPTION
1	031394	GRATE, BURNER
2	310104	GLASS COVER
3	140262	KNOB, TOP BURNER
4	193456	STICKER CONTROLS
5	011020	BURNER ASSY.
6	071975	CUP, VALVE MTG.
7	171981	ORIFICE HOLDER ASSY. INCLUDES THERMOCOUPLE
8	172081	MANIFOLD/VALVE ASSY 3 BRNR
9	122022	BOLT, PLASTIC 5/16"-18
10	122023	NUT, PLASTIC 5/16"-18
11	171996	TUBE, ORIFICE HOLDER
12	233236	SPARK IGNITER
13	063771	BRACKET, IGNITER MTG.
14	122122	SCREW, #10-32 X .750 P.H. SERRATED HEAD MACHINE (EXT. LOCK WASHER)
15	036722	BATTERY HOLDER
16	233238	SWITCH, SPARK IGNITER
17	521151	KIT, CORNER MOUNTING CLAMP
18	072042	GROMMET, TOP GRATE
19	122094	NUT, VALVE MTG.
20	072013	GASKET, ORIFICE HOLDER
21*	233267	WIRE ASSY (IGNITION MODULE TO GROUND)
22*	233262	WIRE ASSY (IGNITION SW. TO MODULE)
23	521167	KIT, EDGE SEAL

**ITEM NOT SHOWN*

INSTRUCITONS *for* **INSTALLING EDGE SEAL**



STEP 1: Remove the paper covering from the adhesive strip on the seal. Do not remove adhesive covering from the entire strip.


STEP 2: Apply the adhesive side of the seal to the bottom of the cooking appliance in 2-3 inch increments. Cover entire perimeter of the cooking appliance.

STEP 3: Once seal has been applied, trim off any excess and discard.


WORKTOP CUTOUTS

Cut-out a hole in the cabinet using the illustrations below based on the model being installed. The cabinet must be appropriately constructed and aligned horizontally with the worktop and with the unit. The cabinet aperture should be perfectly squared and aligned (see page 4 for aperture details).

SDS2CE

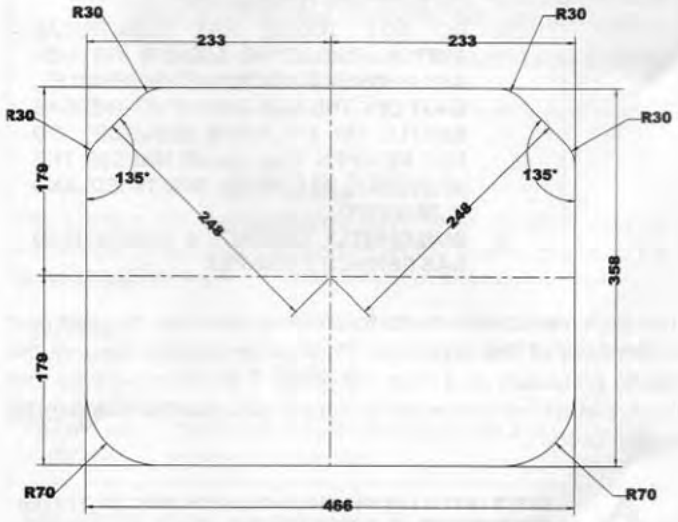


SDS3CE

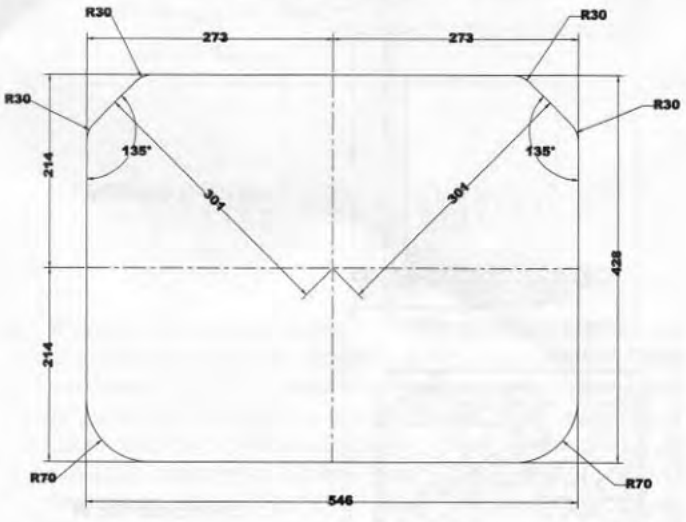


FLUSH MOUNT FIXING

This appliance must be fitted and secured to the cabinet utilizing the fixture screws as illustrated below. Secure the cooktop to the countertop by tightening clamp screws located under rubber bumpers. **DO NOT OVERTIGHTEN.**

1. If the countertop thickness range is between 21mm-25mm, the plastic spacer piece provided should NOT be used in conjunction with the clamping mechanism (refer to figure A).
2. If the countertop thickness range is between 16mm-21mm, the plastic spacer piece provided should be used in conjunction with the clamping mechanism (refer to figure B).

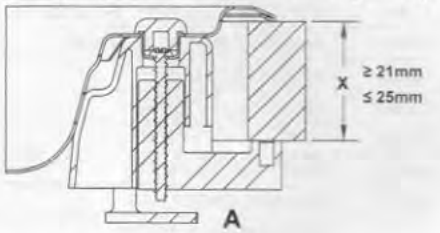

A

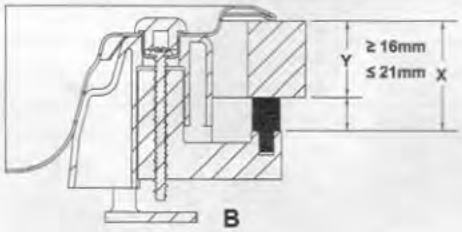


B


CABINET APERTURE

WARNING — **THE APPLIANCE MUST BE FITTED AT AN APPROPRIATE AND SAFE DISTANCE FROM FLAMMABLE MATERIALS.**

FIG.	DIMENSION DESCRIPTION	MINIMUM DISTANCE (MM)
A	FROM THE TOP OF THE BURNER AND THE BOTTOM OF THE UNITS AND/OR SHELVES ABOVE THE HOB	500 mm
B / C	FROM THE OUTER EDGE OF THE BURNER NEAREST ONE OF THE SIDE WALLS AND/OR THE REAR WALL	135 mm
D	THE BOTTOM OF THE BURNER AND THE UNDERSIDE	30 mm

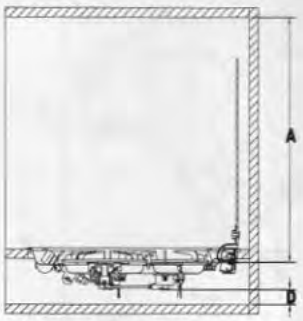

PROFILE VIEW

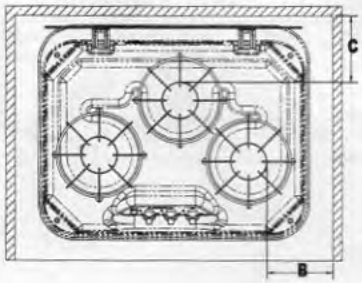

OVERHEAD VIEW

CONNECTING TO GAS SUPPLY

WARNING — **CHECK THESE SPECIFICATIONS BEFORE CONNECTING THE APPLIANCE TO THE GAS CYLINDER/BOTTLE. THE PRESSURE REGULATORS CONNECTED BETWEEN THE GAS CYLINDER AND THE APPLIANCE MUST CONFORM WITH THE CATEGORIES GIVEN IN THE TABLE BELOW.**

This appliance is designed for operation using the following types of gases at the corresponding operating pressures. The gas category (or categories) of the appliance is given on the specification label located on the outside of the appliance.

CATEGORY AND COUNTRY DESTINATION	GAS TYPE & PRESSURE DEFINITION
$I_{3B/P}$ (30) AT BE DE DK FI GB NL NO PT SE SI	30 mbar Butane (G30) 30 mbar Propane (G31)
I_{3+} (28-30/37) BE CH ES FR GB IE IT PT SI	28-30 mbar Butane (G30) 37 mbar Propane (G31)

MODEL	INDIVIDUAL BURNER NOMINAL THERMAL CAPACITY kW - gr/h	TOTAL UNIT NOMINAL THERMAL CAPACITY kW - gr/h
SDS2CE	1.8 - 131	3.6 - 262
SDS3CE	1.8 - 131	5.4 - 393

WARNING

WHEN INSTALLING AND CONNECTING THE APPLIANCE TO THE GAS SUPPLY, ENSURE THAT THE GAS SUPPLY PIPE IS NOT TWISTED, STRETCHED, OR SUBJECTED TO ANY FORM OF STRAIN WHICH COULD CREATE A HAZARD.

WHAT TO DO IF YOU SMELL GAS

IF THE SMELL OF GAS IS PRESENT AT ANY TIME:

1. DO NOT TRY TO LIGHT ANY APPLIANCE. EXTINGUISH ANY OPEN FLAME INCLUDING CIGARETTES.
2. EVACUATE ALL PERSONS FROM THE VEHICLE.
3. DO NOT START THE VEHICLE'S ENGINE OR ELECTRIC GENERATOR.
4. DO NOT TOUCH ANY ELECTRICAL SWITCH (INCLUDING LIGHTS) OR USE ANY PHONE OR RADIO IN THE VEHICLE.
5. SHUT OFF THE GAS SUPPLY AT THE GAS BOTTLE OR CYLINDER (SOURCE). DO NOT RE-OPEN THIS VALVE UNLESS THE GAS LEAK HAS BEEN IDENTIFIED AND ELIMINATED.
6. IMMEDIATELY CONTACT A SPECIALIZED GAS SERVICE ENGINEER.

The gas connection is made to a 8mm ø inlet pipe, beneath and to the front of the appliance. Prior to connection, remove the plastic protection plug from the fitting. It is recommended that the appliance be connected by copper pipe, rubber tubing **must not** be used.

WARNING — **AFTER INSTALLATION, THE APPLIANCE MUST BE TESTED FOR SOUNDNESS. CHECK FOR GAS LEAKS USING A NON-CORROSIVE FLUID (OR ELECTRONIC AND HOMOLOGATED GAS DETECTOR). NEVER USE A FLAME TO TEST FOR GAS LEAKS.**

HOB OPERATION - SAFETY WARNINGS

WARNING	**THIS APPLIANCE MUST ONLY BE USED BY RESPONSIBLE ADULTS. DURING USE AND IMMEDIATELY AFTER USE, THE BURNERS AND OTHER ACCESSIBLE PARTS OF THE APPLIANCE MAY BE HOT; DO NOT TOUCH THESE PARTS AND ALWAYS KEEP CHILDREN AT A SAFE DISTANCE. AFTER USE ALWAYS ENSURE THE KNOB/KNOBS ARE OFF.**
WARNING	**THE USE OF A GAS COOKING APPLIANCE RESULTS IN A PRODUCTION OF HEAT, MOISTURE, AND PRODUCTS OF COMBUSTION IN A ROOM IN WHICH IT IS INSTALLED. ENSURE THAT THE KITCHEN IS WELL VENTILATED: KEEP NATURAL VENTILATION HOLES OPEN OR INSTALL A MECHANICAL EXTRACTOR FAN. IN THE CASE OF PROLONGED USE OF THE APPLIANCE, IT MAY BE NECESSARY TO INCREASE VENTILATION BY OPENING WINDOW(S) AND/OR INCREASING EXTRACTOR FAN SPEED.**
WARNING	**THIS APPLIANCE MUST BE POSITIONED FREE FROM DRAUGHTS, WHICH MAY AFFECT THE COMBUSTION, AND IN A MANNER THAT WILL PREVENT THE ACCUMULATION OF UNBURNT GAS. WHEN IN USE, ENSURE THAT AIR VENTS ARE NOT INADVERTENTLY BLOCKED OR SHUT OFF.**
WARNING	**THE GAS SUPPLY INLET PRESSURE TO WHICH THIS APPLIANCE IS CONNECTED, MUST NOT RISE OR FALL BY MORE THAN 2.5 mbar (BUTANE/PROPANE) FROM NOMINAL WHEN ALL APPLIANCES CONNECTED TO THE SUPPLY ARE OPERATED SIMULTANEOUSLY. IF THIS APPLIANCE IS NOT INSTALLED IN ACCORDANCE WITH THE INSTRUCTIONS AND TOLERANCES DETAILED HEREIN, WE THE MANUFACTURER CAN NOT BE HELD RESPONSIBLE FOR ANY PROBLEMS THAT OCCUR, OR POOR PERFORMANCE THAT IS PERCEIVED/WITNESSED.**
CAUTION	 **THIS WARNING IS AFFIXED IN A VISIBLE LOCATION ON THE HOB GLASS LID. GLASS HOB LIDS MAY SHATTER WHEN HEATED. ALWAYS RAISE THE LID BEFORE IGNITING ANY BURNER(S) AND TURN OFF ALL BURNER(S) AND LET COOL DOWN BEFORE LOWERING THE HOB GLASS LID.** **SPILLAGE ON THE HOB GLASS TOP SHOULD BE REMOVED BEFORE OPENING THE LID.**

OPERATION

The burners on the appliance have fixed aeration and no adjustment is required. Depending on the type of gas used the flame should be:

BUTANE (G30) Normally on initial lighting, a small amount of yellow tipping will occur and yellow tipping will increase as the burner heats up.

PROPANE (G31) The flames should burn quietly with a blue color and no sign of yellow tips.




This symbol is placed to the right of the hob burner control knobs. The full white dot refers to the corresponding hob burner.

KNOB POSITION / SYMBOL	DESCRIPTION
OFF	GAS OFF
	LITE / HIGH FLAME
	LOW FLAME
	ELECTRONIC IGNITION SWITCH / SPARK IGNITOR

WARNING	**MAKE SURE THERE ARE NO PANS OR ANY OTHER OBJECTS ON THE BURNERS WHEN IGNITING. DO NOT ATTEMPT TO LIGHT MORE THAN ONE BURNER AT A TIME.**

1. Know which knob controls which burner. Always be sure the correct burner is turned on.
2. Verify sufficient gas supply before attempting to light the burner. Air in the gas line will significantly delay burner ignition. The burner may light unexpectedly as the air in the line clears and is replaced by LP gas. This unexpected ignition could burn you. Air in the gas lines may occur after the vehicle gas bottle and/or tank is refilled, during and after servicing other appliances on same gas line, etc.
3. Depress knob and turn counter-clockwise ↺ to "HIGH FLAME" position. Keep knob depressed.
   a. Immediately light burner by depressing spark igniter switch.
   b. Once the burner is lit, keep the knob depressed momentarily to ensure burner stays on.
   c. Move control knob to regulate flame accordingly. Correct flame size is determined by utensil size and material, what is being cooked, and whether or not liquid is being used in cooking.
   d. To prevent damage to the hob, never operate a burner without a pan in place.

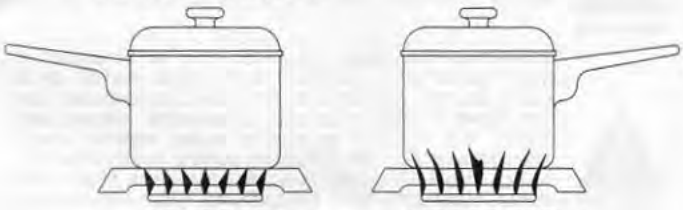

CORRECT
CORRECTE

INCORRECT
INCORRECTE

4. If any burner should extinguish after initial lighting or due to accidental blow-out, turn gas off by turning control knob clockwise ↻ to "OFF", wait five (5) minutes before attempting to relight the burner. Failure to follow these instructions could result in a fire or explosion. If the burner should go out while cooking, or if there is an odor of gas, turn control knob(s) clockwise ↻ to "OFF". Wait five (5) minutes for gas odor to disappear. If gas odor is still present - Do not relight burners. See "What To Do If You Smell Gas" on page 7 of this manual.

5. To turn burner(s) "OFF", turn the appropriate control knob clockwise ↻ to "OFF".

 WARNING	**BE SURE ALL CONTROL KNOBS ARE TURNED "OFF" WHEN YOU ARE NOT COOKING. SOMEONE COULD BE BURNED OR A FIRE COULD START IF A BURNER IS ACCIDENTLY LEFT ON OR UNATTENDED EVEN IF ONLY MOMENTARILY.**
 WARNING	**THE FLAME MUST NEVER EXTEND BEYOND THE EDGE OF THE PAN. CENTRE THE PAN OVER THE BURNER ENSURING STABILITY ON THE PAN SUPPORT.**

RECOMMENDED POT SIZES	
MINIMUM	16 cm
MAXIMUM	22 cm

FOR YOUR ADDITIONAL SAFETY

1. Do not operate top burners on high for extended periods of time - use the high setting to begin, then reduce the flame to a lower setting to continue cooking.
2. Turn pot handles inward or toward the back of the hob, out of the way of anyone walking past and out of the reach of children.
3. Do not use water on grease fires.
4. Never pick-up a flaming pan. Instead, smother a flaming pan with a lid or flat pan.
5. Flaming outside the pan can be extinguished with baking soda or a multipurpose dry chemical fire extinguisher.

MAINTENANCE SAFETY WARNINGS

 WARNING	**IF THE USER OF THIS APPLIANCE FAILS TO MAINTAIN IT IN THE CONDITION IN WHICH IT WAS SHIPPED FROM THE FACTORY OR IF THE APPLIANCE IS NOT USED SOLELY FOR ITS INTENDED PURPOSE OR IF APPLIANCE IS NOT MAINTAINED IN ACCORDANCE WITH THE INSTRUCTIONS IN THIS MANUAL, THEN THE RISK OF A FIRE AND/OR THE PRODUCTION OF CARBON MONOXIDE EXISTS WHICH CAN CAUSE PERSONAL INJURY, PROPERTY DAMAGE OR LOSS OF LIFE.**
 WARNING	**BEFORE CLEANING THE APPLIANCE ALWAYS TURN IT OFF AND WAIT UNTIL IT HAS COOLED DOWN.**
 WARNING	**SURFACES THAT ARE STILL HOT CAN BE DAMAGED IF THEY COME INTO CONTACT WITH COLD WATER OR A DAMP CLOTH. NEVER USE ABRASIVE, CORROSIVE, OR CHLORINE BASED CLEANING PRODUCTS. NEVER USE STEEL OR PLASTIC SCOURING PADS. NEVER LEAVE DEPOSITS OF ACID OR ALKALINE SUBSTANCES (VINEGAR, SALT, LEMON JUICE, ETC.) ON THE APPLIANCE. STAINLESS STEEL SURFACES MUST BE CLEANED ONLY WITH WATER AND SOAP OR A NEUTRAL DETERGENT, THOROUGHLY RINSED AND DRIED. USE CLEAN SPONGES OR CLOTHES TO CLEAN.**
 WARNING	**THE GAS SUPPLY INLET PRESSURE TO WHICH THIS APPLIANCE IS CONNECTED, MUST NOT RISE OR FALL BY MORE THAN 2.5 mbar (BUTANE/PROPANE) FROM NOMINAL WHEN ALL APPLIANCES CONNECTED TO THE SUPPLY ARE OPERATED SIMULTANEOUSLY. IF THIS APPLIANCE IS NOT INSTALLED IN ACCORDANCE WITH THE INSTRUCTIONS AND TOLERANCES DETAILED HEREIN, WE THE MANUFACTURER CAN NOT BE HELD RESPONSIBLE FOR ANY PROBLEMS THAT OCCUR, OR POOR PERFORMANCE THAT IS PERCEIVED/WITNESSED.**

MAINTENANCE

1. No regular maintenance is required except cleaning.
2. Make sure all controls are "OFF" and the hob is cool before cleaning.
3. Make sure that all surfaces, burner grates and burners are cool before cleaning or disassembling.
4. Do not use oven cleaners, bleach or rust removers on the hob or burner grates.
5. Do not obstruct the flow of combustion and ventilation air.
6. Clean all surfaces as soon as possible after boil overs or spill overs.
7. Use warm soapy water only to clean the burner grates, surfaces, painted surfaces, porcelain surfaces, stainless steel surfaces and plastic items on your hob. Do not use grit or acid-type cleaners.
8. Do not use steel wool or abrasive cleaners. They will damage your hob surface. Use only non-abrasive plastic scrubbing pads.
9. Do not allow foods containing acids (such as lemon or tomato juice, or vinegar) to remain on any surfaces. Acids may result in damage.
10. Do not wash warm surfaces. Allow these areas to cool before cleaning. You could burn yourself.
11. Pitting and discoloration will result if spills are allowed to remain for any length of time on stainless steel.
12. Do not allow spill overs to remain on the burner caps. The caps could be permanently stained if spill overs are not cleaned up promptly.
13. If any of the burner ports or the orifice are clogged, carefully clean with a small wire or needle. Be sure not to enlarge ports. Never use a wire brush for cleaning burner ports or orifice. Never use any brush which may "shed" bristles, which may become lodged in the orifice or burner ports and cause a fire or explosion.
14. Replace ignition battery as needed. To replace battery:
    a. Purchase new AA type battery.
    b. Access bottom of cooktop through cabinet underneath cooktop to remove existing battery from battery holder.
    c. Install new battery into battery holder.

ABNORMAL OPERATION

Any of the following are considered to be abnormal operation and may require servicing:

1. Yellow tipping of the burner flame when using propane.
2. Sooting up of cooking utensils.
3. Burners not igniting properly.
4. Burners failing to remain alight.
5. Burners extinguished by cupboard doors.
6. Gas valves, which are difficult to turn.

In case the appliance fails to operate correctly, contact the authorised service provider in your area.

TO REMOVE GRATE(S)

1. Lift opposite sides of the grate to raise free of the drop-in top.
2. To reinstall grate(s) reverse the procedure.

ALL SERVICING MUST BE CARRIED OUT BY AN APPROVED COMPETENT SERVICE TECHNICIAN. AFTER EACH SERVICE, THE APPLIANCE MUST BE CHECKED FOR GAS SOUNDNESS.

CARAVAN COOKING APPLIANCE LIMITED WARRANTY

TWO YEAR LIMITED WARRANTY

This cooking appliance is warranted to the original purchaser to be free from defects in material and workmanship under normal use and maintenance for a period of two years from the date of retail purchase, regardless of the commencement date of use. It is the responsibility of the consumer/owner to establish the warranty period. Suburban's International Partners do not use warranty registration cards for standard warranty. You are required to furnish proof of purchase date through a bill of sale or other payment record.

Suburban's International Partners will replace any parts that are found to be defective within the first two years and will pay a warranty service allowance directly to an authorized Caravan Service Agent at rates mutually agreed upon. The cooking appliance must be returned to the Suburban international partner from which it was originally purchased.

SUBURBAN APPROVED INTERNATIONAL PARTNERS WILL NOT BE RESPONSIBLE FOR:

- Normal maintenance as outlined in the installation and operation instructions and owner's manual including cleaning of the component parts and cleaning or replacement of the burner orifice.
- Initial checks and subsequent commissioning checks - which indicate the cooking appliance is operating properly or diagnosis without repair.
- Damage or repairs required as a consequence of faulty or incorrect installation or application not in conformance with cooking appliance installation instructions.
- Failure to start or operate due to loose or disconnected wire, water or dirt in controls, fuel lines and gas tanks, improper gas pressure or low voltage.
- Cleaning or adjustment of components, electrode, or burner.
- Costs incurred in gaining access to the cooking appliance.
- Parts or accessories that are NOT genuine Suburban parts/spare parts.
- Freight charges incurred from parts replacement.
- Damage or repairs as a consequence of any misapplication, abuse, unreasonable use, unauthorized alteration, improper service, improper operation or failure to provide reasonable and necessary maintenance.
- Any products whose serial number has been altered, defaced or removed.
- Damage as a result of floods, winds, lightning, accidents, corrosive atmosphere or other conditions beyond the control of Suburban or an approved international partner.
- Any special indirect or consequential property, economic or commercial damage of any nature whatsoever. *Some countries do not allow the exclusion of accidental or consequential damages, so the above limitation may not apply to you.*

NO REPRESENTATIVE, DEALER OR OTHER PERSON IS AUTHORIZED TO ASSUME ANY ADDITIONAL, DIFFERENT, OR OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS PRODUCT BESIDES AN AUTHORIZED SUBURBAN INTERNATIONAL PARTNER.

IF YOU HAVE A PRODUCT PROBLEM

FIRST: If your Caravan has its original cooking appliance and is still under the Caravan manufacturer's warranty, follow the steps described in the Caravan's owner's manual.

SECOND: Visit ***https://www.airxcel.com/suburban/service-support/warranty-information*** for a complete list of International Partners.

FOR FUTURE REFERENCE, YOU SHOULD RECORD THE FOLLOWING INFORMATION:

MODEL NUMBER: _____

SERIAL NUMBER: _____

STOCK NUMBER: _____

DATE OF PURCHASE: _____